

List of supported iOS devices

	Little Musician Plus			Little Musician				
	1+	2+	3+	1	2	3	4	5
iPAD	iOS version 8.0+ must be installed			iOS version 5.0+ must be installed, DO NOT support iOS 11 or later				
iPAD 4 Wi-Fi/GSM/CDMA	●	●	●	●	●	●	●	●
iPAD Air Wi-Fi/GSM/CDMA	●	●	●	●	●	●	●	●
iPAD Air 2 Wi-Fi/GSM/CDMA	●	●	●	●	●	●	●	●
iPAD 2017 Wi-Fi/GSM/CDMA	●	●	●	X	X	X	X	X
iPAD Pro								
iPAD Pro 9.7" Wi-Fi/GSM/CDMA	●	●	●	X	X	X	X	X
iPAD Pro 10.5" Wi-Fi/GSM/CDMA	●	●	●	X	X	X	X	X
iPAD Pro 12.9" 2015 Wi-Fi/GSM/CDMA	●	●	●	X	X	X	X	X
iPAD Pro 12.9" 2017 Wi-Fi/GSM/CDMA	●	●	●	X	X	X	X	X
iPAD Mini								
iPad Mini 3 Wi-Fi/GSM/CDMA	●	●	●	●	●	●	●	●
iPad Mini 4 Wi-Fi/GSM/CDMA	●	●	●	X	X	X	●	●

List of supported Android devices*

Worked on tablet larger than 9.7" and Android version 4.0+ must be installed

	Little Musician Plus			Little Musician				
	1+	2+	3+	1	2	3	4	5
Acer								
Iconia Tab A50x	●	●	●	X	X	X	●	●
Asus								
Eee Pad Transformer Prime TF201	●	●	●	X	X	X	●	●
Eee Pad Transformer TF101	●	●	●	X	X	X	●	●
Memo Pad Smart ME301T	●	●	●	X	X	X	●	●
Transformer Pad TF300T	●	●	●	X	X	X	●	●
Transformer Pad TF700T	●	●	●	X	X	X	●	●
Transformer Prime TF201	●	●	●	X	X	X	●	●
Nexus 7	●	●	●	X	X	X	X	X
HTC								
Nexus 9	●	●	●	X	X	X	X	X
Lenovo								
Smart Tab II 10	●	●	●	X	X	X	●	●
Samsung								
Galaxy Note Nexus 10	●	●	●	X	X	X	●	●
Galaxy Note 10.1 GT-N8000	●	●	●	X	X	X	●	●
Galaxy Tab 10.1 GT-P7500	●	●	●	X	X	X	●	●
Galaxy Tab 10.1 GT-P7510	●	●	●	X	X	X	●	●
Galaxy Tab 10.1N GT-7501	●	●	●	X	X	X	●	●
Galaxy Tab 10.1N GT-7511	●	●	●	X	X	X	●	●
Galaxy Tab 2 10.1	●	●	●	X	X	X	●	●
Galaxy Tab 8.9 GT-P7310	●	●	●	X	X	X	X	X
Galaxy NotePro 12.2 SM-P900	●	●	●	X	X	X	●	●
Galaxy TabPro 10.1 SM-T530	●	●	●	X	X	X	●	●
Nexus 10 GT-P8110	●	●	●	X	X	X	●	●
Galaxy Tab 4 7.0	●	●	●	X	X	X	X	X
Galaxy Tab 3 10.1	●	●	●	X	X	X	X	X
Galaxy Tab S 8.4	●	●	●	X	X	X	X	X
Xiaomi								
Mi Pad 1	●	●	●	X	X	X	X	X
Mi Pad 2	●	●	●	X	X	X	X	X
ZTE								
Smart Tab 10	●	●	●	X	X	X	●	●